

*Setting Up the System


Caution

Do not touch the electrical connectors while setting up the printer. Electrostatic discharge can damage or destroy the printhead or electronic components.


ALWAYS PLUG THE PRINTER INTO THE ELECTRICAL WALL OUTLET FIRST AND THEN TURN ON THE PRINTER – NEVER TURN ON THE PRINTER AND THEN PLUG IT INTO THE WALL OUTLET.

Follow these instructions to setup the printer, keypad/terminal, and power supply in the tray.


1. Remove the tray and check inside the packaging for the adhesive feet. Remove the feet from their adhesive backing and apply one to each corner.
2. Place the tray on the cut table near an electrical outlet.
Tray design may vary from the one shown.

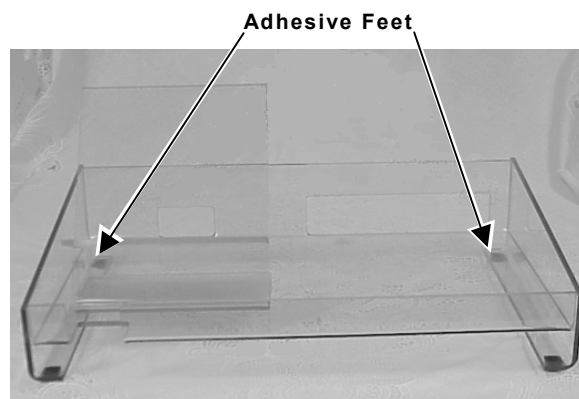


3. Make sure the power is off on both the printer and the keypad/terminal before setting up any cables.

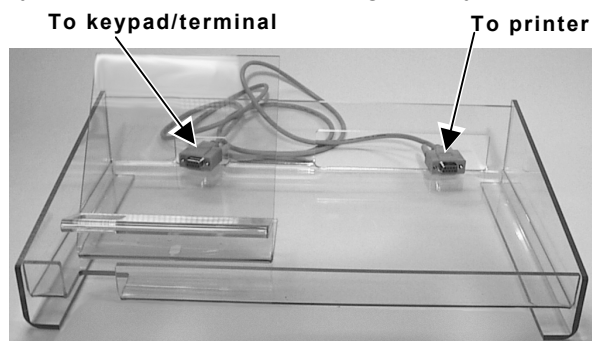

4. Facing the front of the tray, lay the serial cable (part number 125802) behind the tray.
5. Plug the three-hole end of the printer's power supply cable into the three-pronged outlet in the printer's power supply.

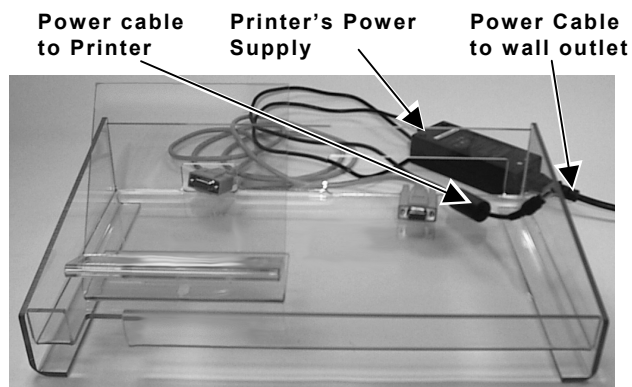

6. Place the printer's power supply behind the tray with the printer's connector on the right side.
7. Place the keypad/terminal's power supply into the tray under the shelf with the three-pronged end facing the cut-out in the back of the tray.

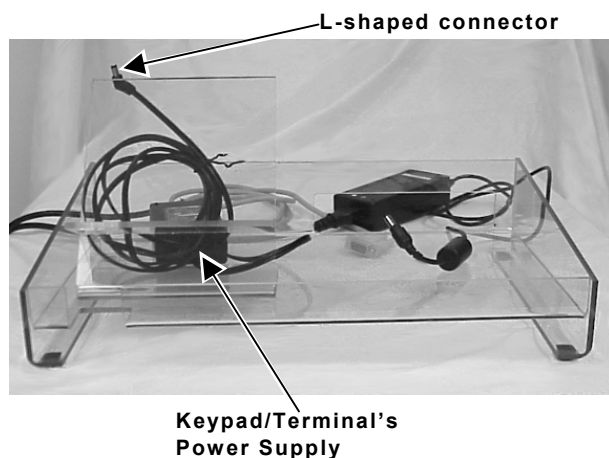

8. Through the back of the tray, plug the three-hole end of the keypad/terminal's cable into the three-pronged outlet in the keypad/terminal's power supply (18-24V).
9. Lay the keypad/terminal's cable with the L-shaped connector on the shelf.
10. Place the keypad/terminal on the shelf, but do not remove the tape from the Velcro® at this point.



The keypad/terminal should not be operated in a location that has room temperatures above 158° F or below -4° F for extended periods of time. This could permanently damage the display.

Make sure the printer's power supply is not accidentally connected to the keypad/terminal.


11. Plug the L-shaped connector into the socket located on the top of the keypad/terminal (12V).
12. Connect the serial cable to the top of the keypad/terminal.
13. Place the printer in the tray.

The printer should never be operated while resting on its side or upside down.

14. Plug the printer's power supply cable (with the straight end) into the socket on the back of the printer.

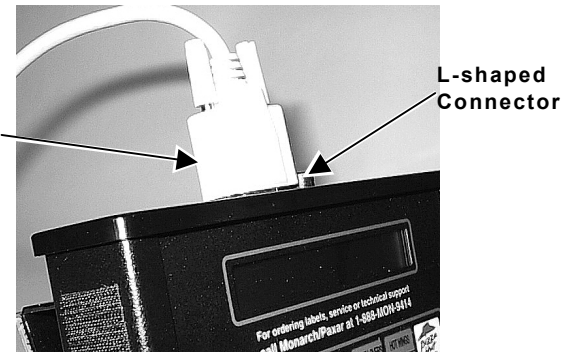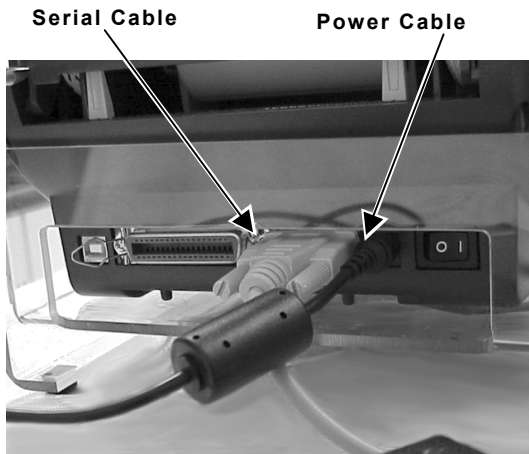

15. Connect the serial cable to the printer's serial port.
16. *If necessary*, adjust the cables. Make sure all the cables move freely through the openings in the back of the tray. Use a cable tie to secure them.

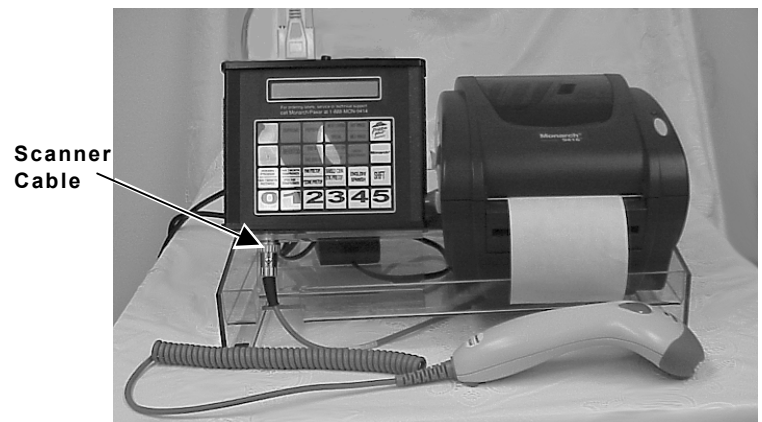

17. Lift up the keypad/terminal with one hand and feed the scanner cable connector through the notch as shown.
18. Plug the scanner cable connector into the socket and then turn the connector to lock the cable in place.
19. Remove the tape from the Velcro® on the keypad/terminal and put the keypad/terminal onto the shelf.
20. Plug the printer's power supply cable into a **GROUND** electrical outlet.
21. Press the power switch on the back of the printer to the ON position (I) to turn on the printer.

Warning

The printer and power supply should never be operated in a location where either one can get wet. Personal injury could result.

22. Plug the keypad/terminal's power cable into a **GROUND** electrical outlet.

For future upgrades, an extra cable (part number 125801) is provided to connect your keypad/terminal to a PC.

IF YOU NEED HELP, PLEASE CALL 1-888-666-9414.

IF YOU NEED MORE PAPER LABELS, CALL ONE OF THE FOLLOWING:

| | | |
|----------------------------|---------------------|-----------------------------|
| PrimeSource: | 800-397-4737 | (order item #85221) |
| Wasserstrom: | 800-999-9277 | (order item #374014) |
| Unified Food Co-Op: | 800-444-4144 | (order item #374014) |